尚Husqvarna





- Utility Foot A, Utility Foot B, Buttonhole Foot C, Blind Hem Foot D, Zipper Foot E, Non-Stick Glide Foot H, Edging Foot J, Embroidery Darning Foot R, Sensor One-Step Buttonhole Foot,
- Self-Adhesive Glide Plates
- Stylus
- 261 total stitches and 5 alphabets
- 150 built in embroidery designs and 2 Built-In Embroidery Fonts in three different sizes

Top Selling Features:

- 1. INTERACTIVE COLOR TOUCH SCREEN (WITH STYLUS) See everything clearly and in full color on the large 53 x 70 mm (3.5") screen. Easy to navigate through various screens for sewing and programming.
- 2. LARGE EMBROIDERY AREA Embroider up to a 14 ½" x 8" (360 x 200mm) without rehooping.
- LARGE SEWING SURFACE Almost 10" (250mm) to the right of the needle. Perfect for large projects and ease of sewing.
- 4. **EMBROIDERY DESIGN EDITING AND SAVE** See all changes right on the screen; rotate, scale, and mirror image. Save your new combination in the machine memory or on a USB stick.
- 5. EXCLUSIVE SENSOR SYSTEM™ TECHNOLOGY- Automatically and continuously senses and adjusts as you sew any thickness of fabric for perfect, even feeding.

Top Sell Up Features from DESIGNER TOPAZ™ 30 model:

- INTERACTIVE COLOR TOUCH SCREEN
- 98 MORE STITCHES
- 57 ADDITIONAL EMBROIDERY DESIGNS
- I ADDITIONAL EMBROIDERY ALPHABET
- CAN EDIT DESIGNS ON SCREEN

- I° ROTATION OF DESIGNS, COMBINE AND SAVE DESIGNS ON SCREEN
- BASIC DESIGN POSITIONING
- EXCLUSIVE EMBROIDERY ADVISOR™
- UPDATEABLE BY THE USER Always have the latest software version



Designer Topaz M 50

Master the Basics

Phase O	ne	
FEATURE	TECHNIQUE	BENEFIT
EXCLUSIVE SENSOR SYSTEM™	 FABRIC: Chino SELECT: Woven Medium ,Straight stitch A1 USE: Presser Foot A SEW: Fold fabric in half. Line up fold on stitch plate line. Step on the foot control to lower the foot and sew. Sew off fabric and stop. 	Turn it on – ready to sew. Automatically lowers the presser foot.
	Touch Sensor Foot Extra Lift twice.	With a touch, pressure foot rises to highest height and feed teeth lower.
101	 FABRIC: Sweatshirt fleece SELECT: Knit Medium, Engage Needle Down SEW: ➤ Fold the fabric into quarters. ➤ Sew onto the four thicknesses. ➤ Pivot, sew, pivot, and sew. ➤ Sew off the fabric and stop. ➤ Tap foot pedal: needle up. Tap again: needle down. Tap again. 	 Sensor Foot Extra Lift allows easy access to thick fabrics. Pivot position – turning fabric, precise corners, applique. Sensor Foot Pressure chooses perfect height for foot to float when pivoting.
	FABRIC: Cotton and batting SELECT: Woven Medium ➤ Sew onto the fabric and batting. ➤ Stop, pivot, and sew. Continue sewing and pivoting on the fabric and batting ➤ Sew off the fabric and stop	 Exclusive Sensor Foot Pressure automatically and continuously senses the fabric thickness and adjusts for perfect fabric feed. Diamond-point feed teeth move the fabric and batting evenly without snagging.
*	 FABRIC: Denim SEW: ➤ Begin sewing on single thickness ➤ Create pleats toward needle leaving single thickness space between pleats. Sew into the pleats. ➤ Stop sewing at raw edge. Press Selective Thread Cutter 	 Perfect even feeding over all weights of fabric. Selective Thread Cutter pulls cut thread tails to the back.

Phase One		
FEATURE	TECHNIQUE	BENEFIT
EXCLUSIVE SEWING ADVISOR®	Using the Exclusive SEWING ADVISOR® - SELECT: Medium woven and Seam/Overcast SHOW: Correct stitch is selected for that fabric and technique SELECT: Medium stretch and Buttonhole SHOW: Different stitch automatically selected	 Simple selection, instant setting – Best stitch Best stitch width and length Best thread tension Best sewing speed Best Sensor Foot Pressure Interactive Screen shows recommended foot, needle, and stabilizer or cord.
JEANS HEM	 FABRIC: Denim SELECT: Woven Heavy and Seam SEW: ➤ Fold denim in half , wrong sides together ➤ Sew along the fold using 5/8" seam allowance ➤ Fold the seam to one side ➤ Topstitch fold down ➤ Fold up bottom raw edge twice to form hem. ➤ Sew hem in place from the front side of the jeans hem. 	 Penetration power handles heavy duty projects. Electronic power drives needle penetration even at slow speed.
PERFECT REPEATING BUTTONHOLES	 SHOW: Exclusive SEWING ADVISOR® Buttonhole Sample FABRIC: Medium woven chino and stabilizer SELECT: Woven Medium and Buttonhole on the Exclusive SEWING ADVISOR® USE: Sensor One-Step Buttonhole Foot MEASURE: Place button against the button ruler at lower right of machine. SEW: Fold fabric in half with stabilizer in the middle. Match the white line with the white crown on the wheel. Line the short toe of the buttonhole foot along the fold of the fabric. Press on the foot control and sew buttonhole. Reposition, repeat, and sew another. SHOW: Increase or decrease buttonhole size using sizing icon. Press ALT to adjust buttonhole density. 	 Sensor One-Step Buttonhole Foot creates perfectly balanced, one-step repeatable buttonholes. 9 buttonholes - there's always one that's perfect for your project. Exclusive SEWING ADVISOR® selects the correct style of buttonhole, stitch length and stitch width for the type of fabric used.

Phase One		
FEATURE	TECHNIQUE	BENEFIT
EASY BLIND HEM	 FABRIC: Medium woven wool SELECT: Woven Medium and Blind Hem on the Exclusive SEWING ADVISOR® feature. USE: Presser Foot D SEW: Fold up hem on piece of wool. Keep the fold along the inside of the large toe of the foot. Just catch the fold with the left swing of the needle as you stitch. Adjust the stitch width and catch just a thread from the fold. 	 Perfectly engineered blind hem foot (D) allows you to sew a beautiful blind hem. Multiple needle positions allow for fine tuning.
MULTIPLE NEEDLE POSITIONS O O O O O O O O O O O O O O O O O O	 FABRIC: Woven medium chino SELECT: Woven Medium and Seam on the Exclusive SEWING ADVISOR® USE: Presser Foot A SEW: Fold fabric in half. Keeping fold along the outside right edge of the presser foot, sew a seam. Adjust needle position to the left with the Stitch Positioning icon. Re-align fabric as above and sew again. Use the mirror image side-to-side to move the needle to the far right. Sew as above one more time. 	 29 needle positions make it easy to sew cording, piping, zippers etc. Topstitching, under stitching, stitch-in-the-ditch, and edge stitching are also made easier with this feature.
APPLIQUE	FABRIC: 2" square of quilter's cotton, 6" square of medium weight woven fabric and stabilizer.	Effortless applique.Multiple needle positions mean accurate
101	 SELECT: Stitch D:3, blanket or pin stitch USE: Presser Foot A SEW: Layer centered 2" square on 6" square and stabilizer underneath all. Line up the right side of the small square with the red line on the foot. Adjust needle position if needed. Press the foot control, stitch a few stitches then Activate Needle Down. Continue stitching and pivot at corner. 	 stitch placement along applique edge. With Needle Down active, exact stopping position is maintained as you pivot.

Phase Two		
FEATURE	TECHNIQUE	BENEFIT
STRETCH STITCHES	FABRIC: Sweatshirt fleece and ribbing SELECT: Stretch Medium and Seam/Overcast on the Exclusive SEWING ADVISOR®. USE: Presser Foot B SEW: Cut a small neckline on fleece Fold ribbing in half lengthwise, stretch to fit curve of fleece Sew near fabric edge creating a neckline.	 Creates a seam that will stretch on knit fabrics. Seam/Overcast prevents raveling of the seam allowance on woven fabrics.
DECORATIVE STITCHES	 FABRIC: Woven medium chino and stabilizer SELECT: Menu F (Decorative Stitches) and stitch of choice USE: Presser Foot B SHOW: Select various stitches to show how easy it is to step through stitches and menus 261 stitches and 5 fonts to choose from SEW: Sample of 2 or 3 decorative stitches. 	 Simply touch the screen to select your stitch. Stitch length and width are selected for you but you can easily override the settings to customize each stitch. Decorative stitches provide beautiful interest and embellishment for your projects.
ALPHABETS & MONOGRAMS ABCD abcd 1234	SHOW: Lettering and monogram sample FABRIC: Woven medium chino and stabilizer SELECT: Fonts, Block Alphabet USE: Presser Foot B PROGRAM: Program the customer's name SEW: The customer's name	5 different built-in fonts with upper and lower case letters, and numbers: • Block • Brush Line • Script • Cyrillic • Hiragana Create quilt and other project labels.
HEIRLOOM STITCHES	SHOW: Heirloom Stitch Sample FABRIC: Woven light linen or other natural fiber fabric and stabilizer SELECT: Menu C (Heirloom Stitches) stitch 9 USE: Presser Foot B and 100 Wing needle SEW: A row of entredeux stitches.	 Specialty stitches are built-in for this specialty technique. No need for time consuming hand work. Programming is possible to create your own heirloom insertions with beautiful decorative stitches.

Phase Two		
FEATURE	TECHNIQUE	BENEFIT
QUILTING: Quarter Inch Seam 1//1 4 1	1/4" SEAM FABRIC: Woven medium cotton SELECT: Stitch Menu D (Quilting Stitches) stitch 1, 1/4 " stitch USE: Presser Foot A SEW: 1/4" seam	 Instant setting for perfect ¼" seams. Multiple other quilting feet available.
Free Motion	FREE MOTION FLOATING FABRIC: Woven medium cotton with batting SELECT: Menu A, Stitch 1 Touch the Sewing Information Tab, Select the Free Motion Technique Icon, Select Free Motion Floating from the Pop-Up Menu. Lower the feed teeth by moving the switch on the front of the free arm to the right. USE: Presser Foot R SEW: Some stippling stitches	 2 free motion modes: Free Motion Floating: foot floats freely over fabric while quilting. Free Motion Spring Action: foot moves up and down holding your fabric in place with each stitch.

Phase Three		
FEATURE	TECHNIQUE	BENEFIT
EMBROIDERY: CUSTOMIZING	SHOW: EMBROIDERY HOOP SAMPLES FABRIC: Medium woven fabric with stabilizer hooped in large 360 x 200 hoop. Thread machine with 40 wt rayon thread and insert embroidery bobbin. SELECT: Embroidery Mode and calibrate hoop USE: R-foot SELECT: Hoop – 360 x 200	 Conversion from sewing to embroidery is instantaneous. Edit on screen. Screen gives design preview plus design size, number of stitches and the color changes. All available HUSQVARNA VIKING® hoops are stored on screen for simple selection.
?	 EDIT: Select the Start Menu and click on Designs. Touch Quick Help then touch design no. 6 to preview the Design File information. Close the window. 	
	 Scroll down and select design 13 and see it automatically load to Ultimate Interactive Screen. Select design no. 36 and see it automatically load to Ultimate Interactive Screen. 	
	 Touch the stylus to the screen and drag the flower to position it next to the leaf, to show on-screen movement. Demonstrate rotation using your stylus and 	
©O!	also by touching rotation icons on the Control. Mirror image side-to-side.	
FONTS	 SELECT: Fonts Menu/Script SHOW: ➤ Choose letters for customers name, using a capital letter for the first letter and lower case for the rest of the name and select OK. ➤ Arrange customers name with the leaf and flower on the Interactive Color Touch Screen. 	 Quickly and easily personalize your sewing using the built-in fonts. Easily combine fonts and embroideries and then view on screen before stitching.
	 Touch & Hold on the Step Through Designs icon. Choose the Center Design icon to move design into the center of the hoop. Delete the design from the screen. 	
SCALE	 SELECT: Design Menu, Design no. 6 Select the ALT button Select the Scale icon Drag design to a smaller size. Drag design to a bigger size. Touch 100% to put the design back to original size. Delete design from screen. 	 Scale embroidery designs right on screen. Designs can be increased or decreased up to 20 %.

Phase Three		
FEATURE	TECHNIQUE	BENEFIT
BASIC DESIGN POSITIONING	SELECT: Design no.3 EMBROIDER:	
	 Touch design on screen and drag to upper half of hoop. Touch ALT and Rotate the design 90 degrees. 	
\(\rightarrow	Mirror image the design End - To - End Touch GO for Embroidery Stitch Out Mode and stitch out the design.	
GOL	 When prompt appears to clear the screen, touch X. Return to the Embroidery Edit screen, mirror image the design end to end, touch the 	
~	Go button to return to Embroidery Stitch Out mode.	
	 Touch the Basic Design Positioning Icon Touch Step 1 Touch screen to assign first crosshair position on the design's top point of the triangle. Select Step 2 icon and drag design on screen 	
	till needle is directly over bottom left corner of previously stitched design. Sew out the second design.	

© 2013 KSIN Luxembourg II, Sari. All rights reserved. VIKING, EXCLUSIVE SENSOR SYSTEM, SEWING ADVISOR and SAPPHIRE are trademarks of KSIN Luxembourg II, Sari. HUSQVARNA and the "crowned H-mark" are trademarks of Husqvarna AB. All trademarks are used under license by VSM Group AB.

